




COOKTOP AND CONTROL PARTS

For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

30" ELECTRIC
FREESTANDING
RANGE
SELF CLEAN OVEN
DESIGNER STYLE

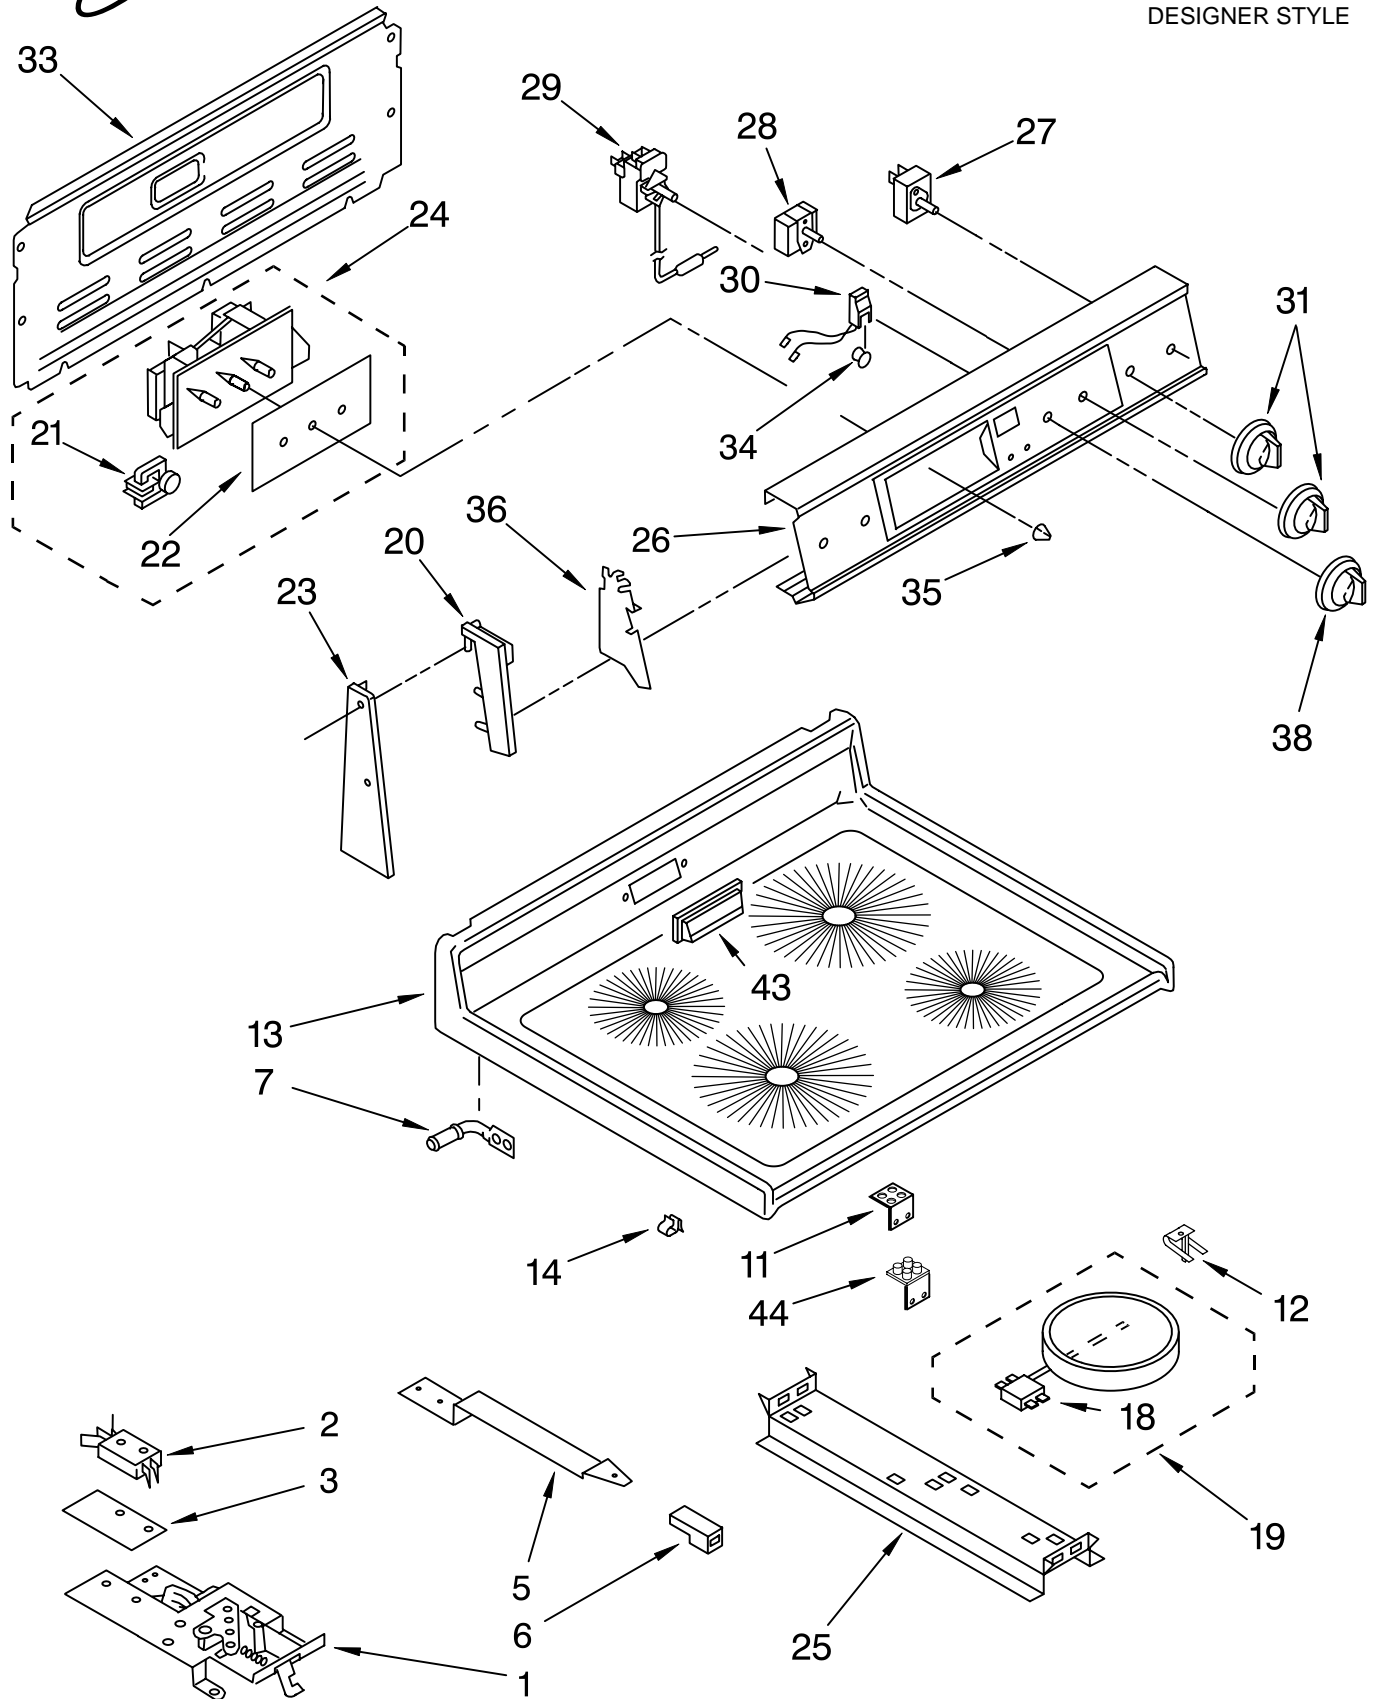

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP AND CONTROL PARTS


For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			14	311311	Clip, Wire	27		Switch, Infinite
			18		Limiter, Temp.		3148952	LR & RF
				3169552	1400W – LR		3148955	LF & RR
				3169553	1700W – RF		308119	Screw (8)
				3169554	2100W – RR	28	3169311	Switch, Selector (5 position)
				3169555	2400W – LF		308119	Screw, (2)
1	3148668	latch Mechanism	19		Element, Surface (Includes No. 18)	29	3169526	Thermostat, Oven
	343641	Screw, 10–16 x 1/2 (2)		3169543	1400W – LR		311932	Screw, 6–32 x 1/4 (2)
2	3169497	Safety Switch		3169544	1700W – RF	30		Light, Indicator (Surface Unit)
	3169547	Screw (2)		3169545	2100W – RR		3169457	(Oven Unit)
3	3169498	Insulator, Switch		3169546	2400W – LF	31	314031	Knob (5)
5		Handle, Latch	20	3187791	End Cap R.H.		3188721	Inf. & Selector
	3169081	Black		3187792	End Cap L.H.	33	3187332	Cover, Control
	308422	Screw, 10–24 x 1/2 (2)		3150344	Screw (4)		343641	Screw, 10–16 x 1/2 (8)
6		Latch Knob	21	309822	Motor, Timer	34	313101	Lens, Amber (2)
	3148684	Black		3185647	Screw (2)	35	3169182	Knob, Timer (3)
	155023	Screw	22	3169549	Glass, Timer	36	313608	Shield, Glass (2)
7	3169384	Pin, Top (2)	23	3187671	End Trim R.H.		246132	Screw, 8A x 3/8 (2)
	343641	Screw, 10–16 x 1/2 (2)		3187672	End Trim L.H.	38	3188724	Knob, Thermostat
11	3149032	Bracket, Indicator		343641	Screw (4)	43		Cover, Vent
		Light Mounting	24		Timer, Clock		3149011	White
	98520	Screw (2)		661458	Black with Chrome		3149012	Almond
12	3149191	Spring, Element (8)		246132	Screw (2)		3149190	Clip (2)
	246119	Screw (8)	25	3148809	Bracket, Mounting	44	3169395	Light, Indicator (Hot Surface)
13		Cooktop		98520	Screw (6)			
	3176530	White	26	3188678	Control Panel			
	3176531	Almond						
	3367670	Screw (2)						

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

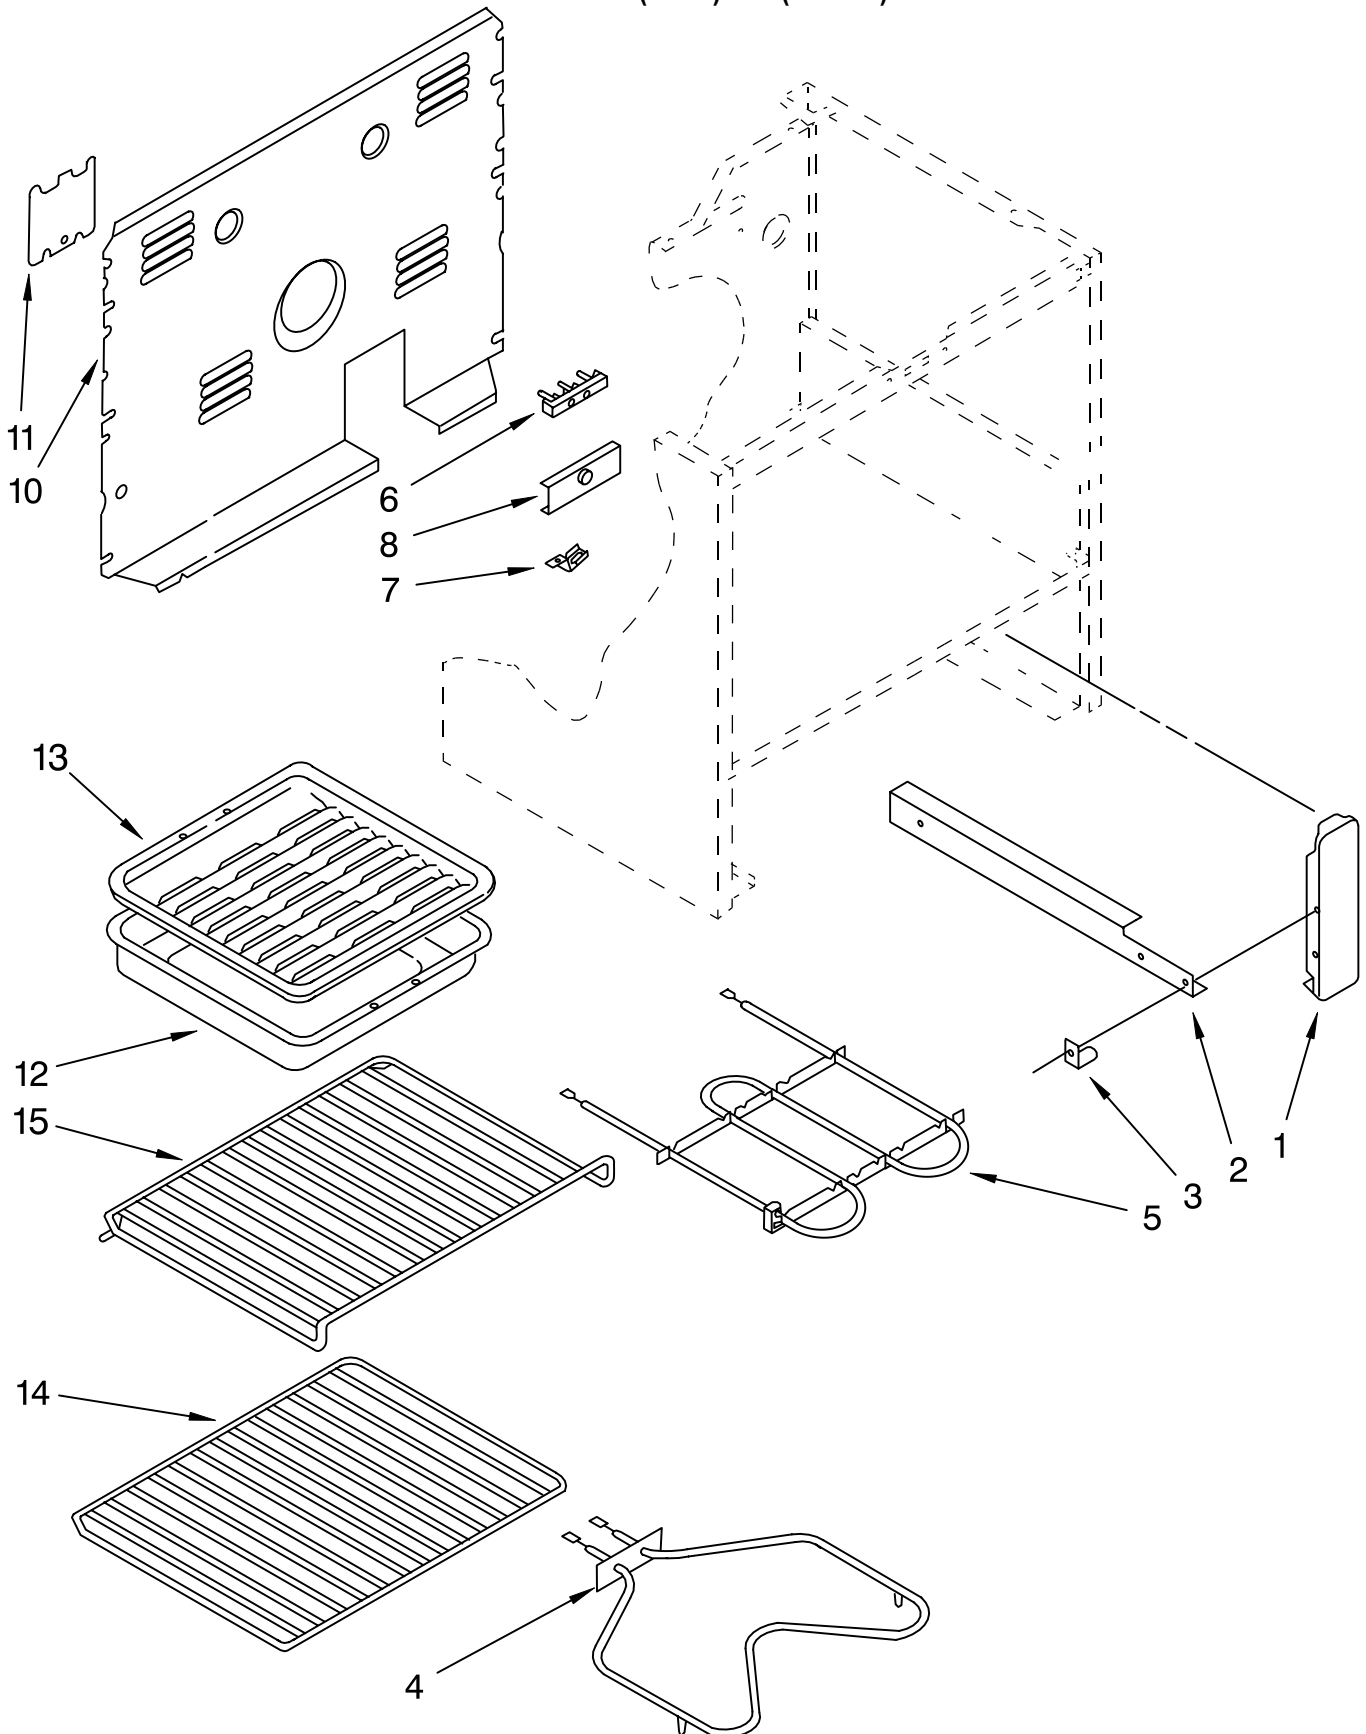

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UNIT PARTS

For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3169420	Bracket, Mounting (2)
	343641	Screw (5)
2	3149255	Rail R.H.
	3149256	Rail L.H. (Includes Illus. 3)
	343641	Screw, 10A x 1/2 (2)
3	3149257	Glide, Front (2)
	307748	Screw (2)
4	661170	Unit, Bake
	3150532	Screw, 10-32 x 7/16 (2)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

5	660579	Unit, Broil
	3150532	Screw, 10-32 x 7/16 (2)
6	258076	Terminal Block
	98884	Screw, 10-16 x 1 (2)
	112432	Nut (6)
7	308498	Ground Strap
	313660	Clip
	690989	Screw, 10-32 x 1/2
8	3150190	Bracket, Service
	343641	Screw, 10-16 x 1/2 (2)
10	3148975	Cover, Rear
	343641	Screw, 10-16 x 1/2 (7)
11	307972	Cover, Service
	343641	Screw, 10-16 x 1/2 (2)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

12	3169076	Pan, Broiler
13	3147563	Rack, Broiler
14	308173	Rack, Oven (Straight)
15	308172	Rack, Oven (Offset)


Following Parts Not Illustrated

3169093	Insulation, Wrapper
3169094	Insulation, Oven Back
814091	Anti-Tip Kit (Floor Mount)
3183488	Scraper, Glass
3184477	Cleaner, Glass

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

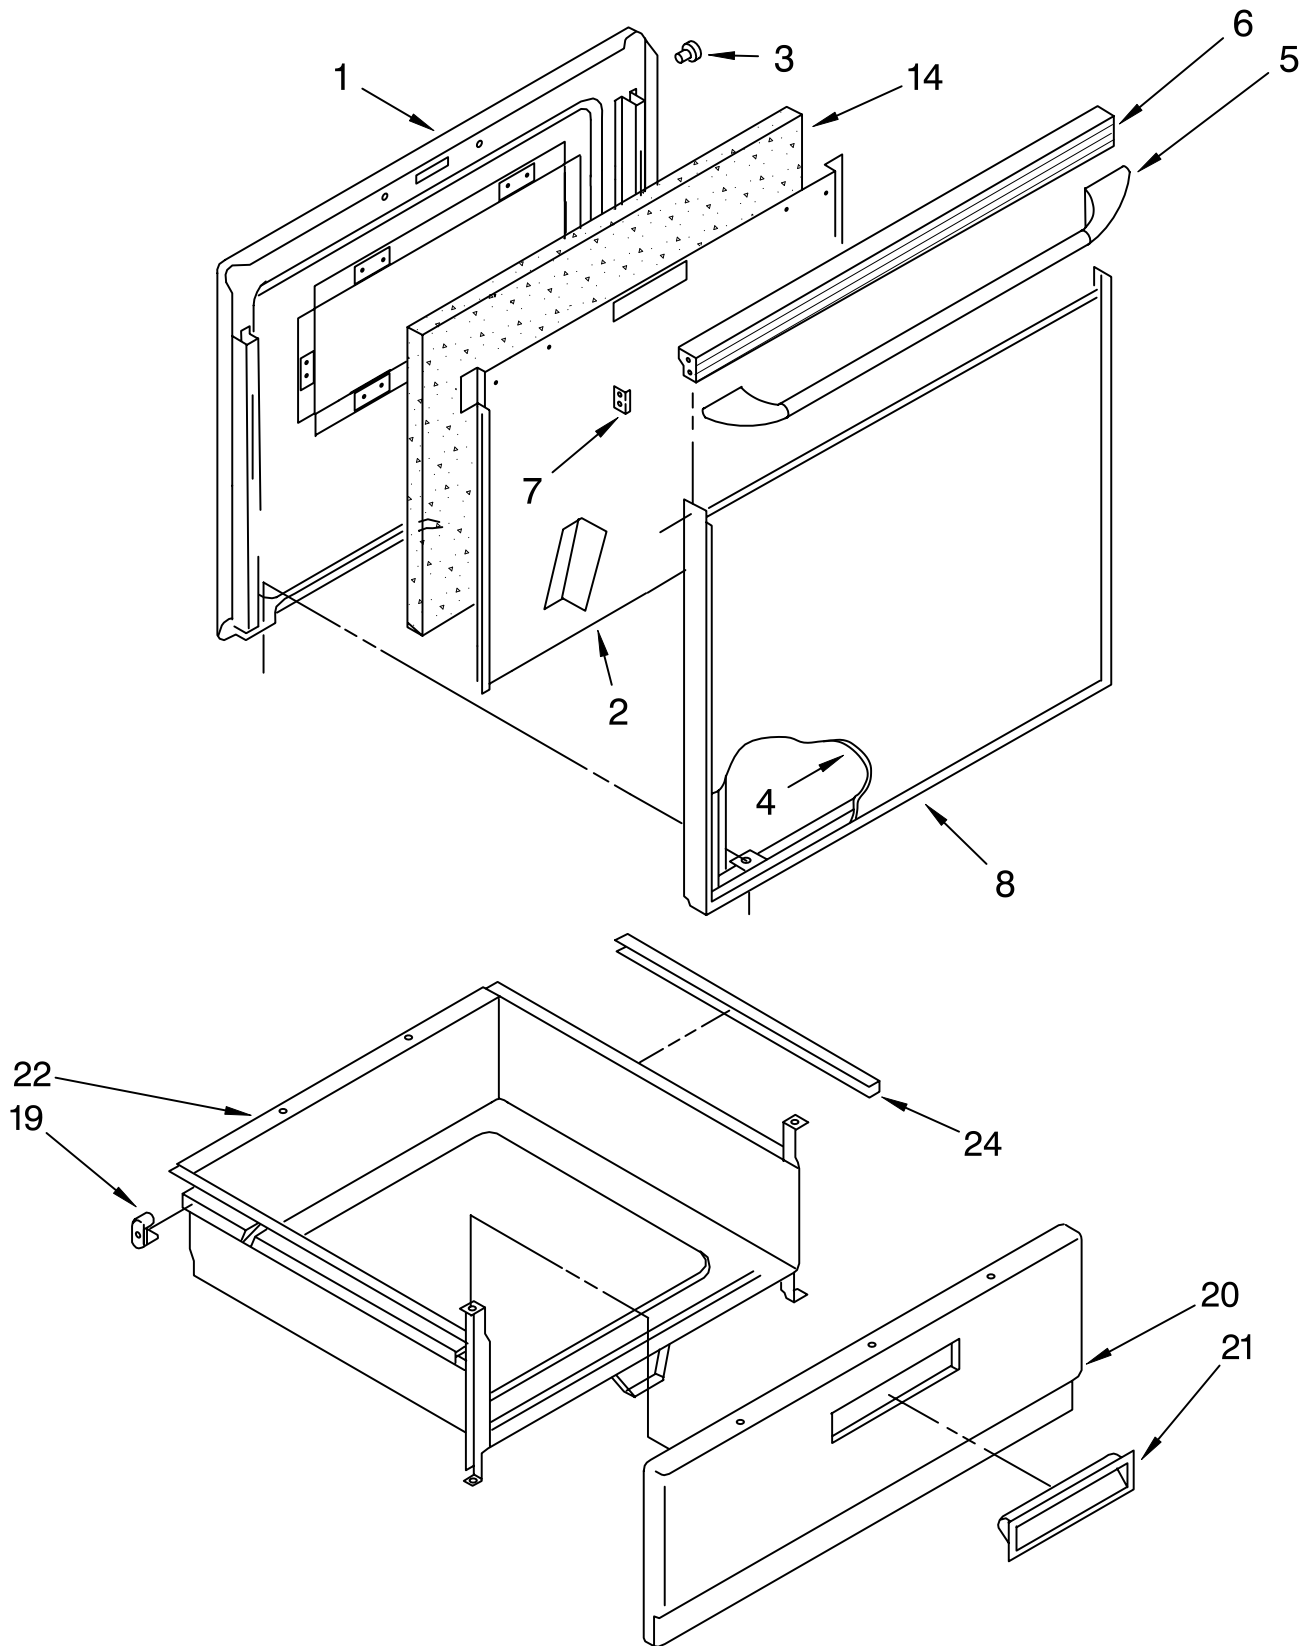

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172219	Liner, Door
2	3148160	Retainer, Insulation
	3185647	Screw (4)
3	3148182	Bumper, Door (4)
4	3148186	Panel, Glass
5	3188695	Handle, Door
6	3188692	Door Top, Vent
	3149333	Screw (2)
7	3148282	Clip, Handle (2)
	3169474	Screw (4)
8	3188997	Frame, Door
	3149333	Screw (3)
	3149253	Screw (4)
14	3147951	Insulation
19	307980	Glide, Rear
	3393008	Screw (2)
20		Panel, Drawer
	3169430	White
	3169431	Almond
	313349	Screw (3)
21		Handle, Snap-In
	3150612	White
	3150613	Almond
22	327887	Drawer, Utility
24	309329	Protector, Drawer (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

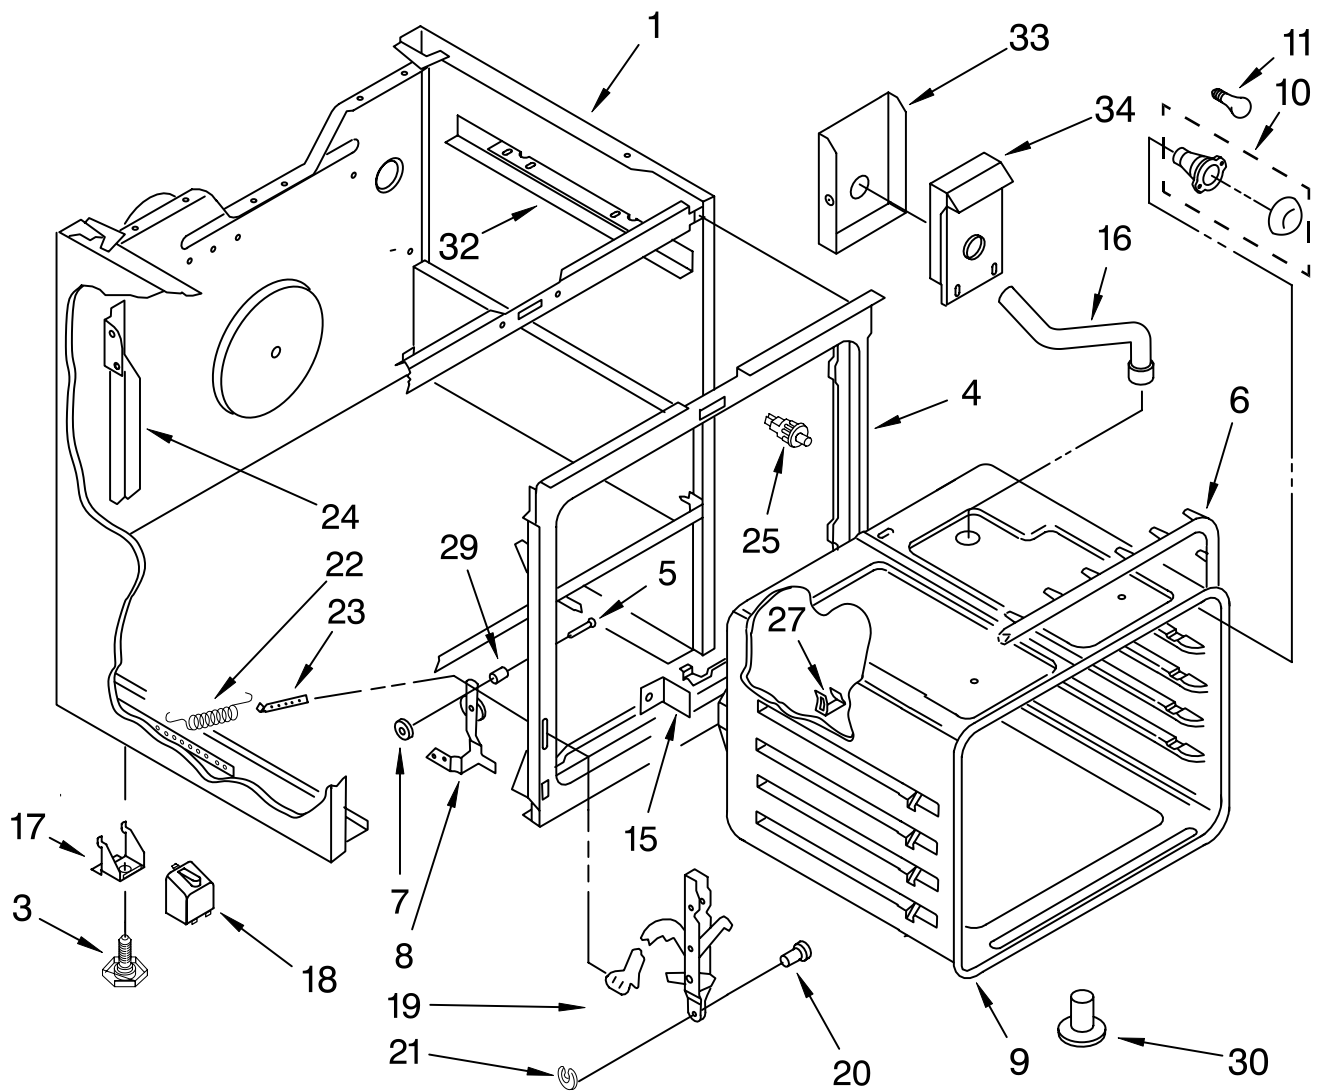

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS


For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			9	3176611	Oven (30" Pyro)	24	313196	Support, L.H Channel
				311056	Screw (3)			
			10	3150505	Socket Assembly		313197	Support, R.H Channel
			11	311255	Bulb, Oven Light			
			15	311220	Bracket, Oven Mounting		343641	Screw, 10-16 x 1/2 (4)
1		Main Chassis				25	310345	Switch, Door
	330086	White		343641	Screw, 10-16 x 1/2 (4)	27	313382	Clip, Therm Bulb (2)
	330090	Almond	16	3169365	Vent, Oven	29	309111	Snubber, Door (2)
	690989	Screw, 10-32 x 1/2		307748	Screw, 10A x 1/2 (2)	30	3169109	Tube, Vent
	343641	Screw, 10-16 x 1/2 (2)					343641	Screw
3	3169499	Leg Leveling (4)	17	3169418	Support, Foot (2)	32	3147646	Support, Chassis (2)
4	3176718	Frame, Front		343641	Screw (2)		309112	Screw, (2) #8-18 x 1/2
	311056	Screw (2)	18	3169448	Cover, Foot (2)	33	3149006	Shield, Box
	3150537	Screw (1)	19	3176709	Channel, Arm (2)		98520	Screw (2)
5	307985	Pin, Hinge	20	307986	Hinge Pin (2)	34	3169278	Box, Vent
6	3169251	Seal, Door	21	307594	Ring, Retainer (2)		313349	Screw (2)
7	308306	Pushnut	22	308127	Spring, Oven Door (2)			
8	3176710	Hinge, R.H.	23	308125	Anchor, Spring (2)			
	3176711	Hinge, L.H.						
	343641	Screw, 10-16 x 1/2 (4)						

WIRING HARNESS PARTS

For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
1	3169551	Harness, Wire (Surface Unit)
2	3169507	Harness, Wire (Oven)
3	3169449	Clip, Snap-In
4	313154	Harness, Wire (Oven Light)
5	3169450	Harness, Wire (Lock Switch)
6	313438	Strain Relief
7	311227	Wire, Ground(2)

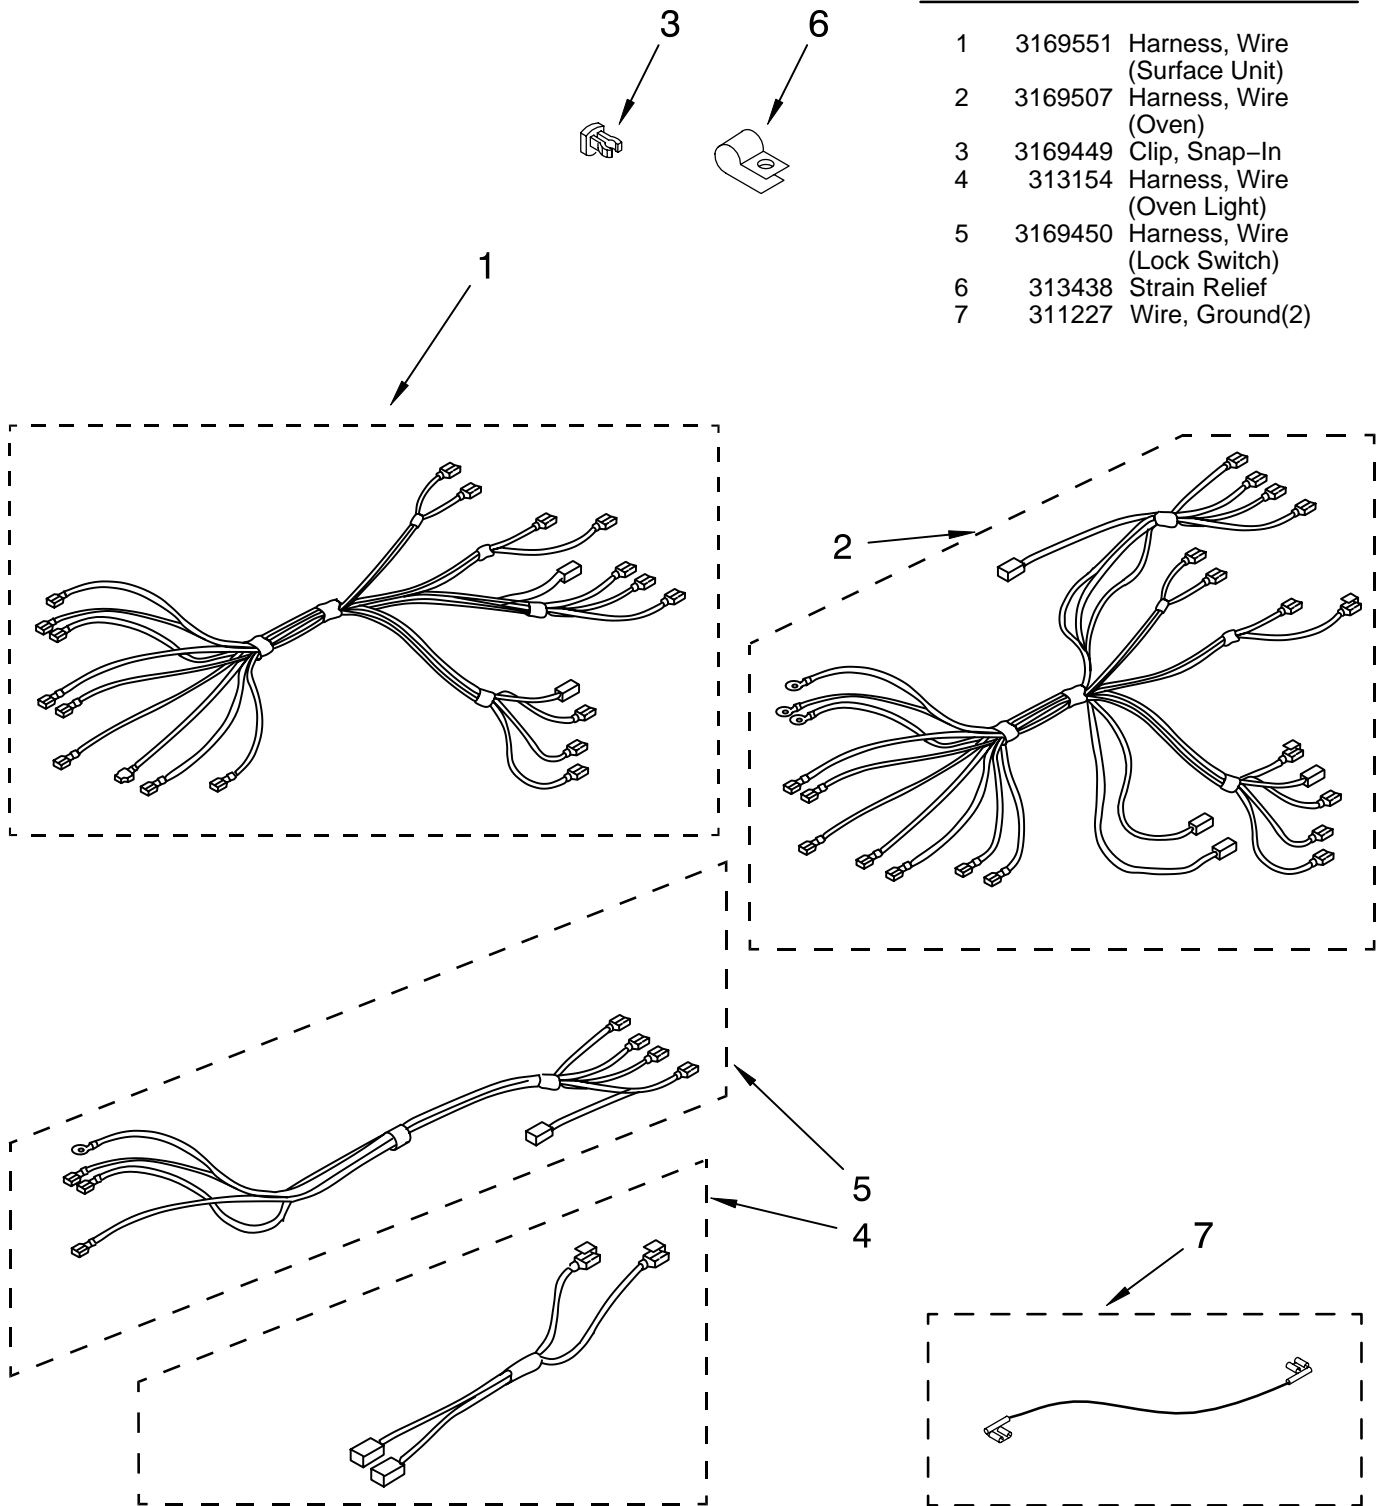

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS NOT INCLUDED

For Model: RF366BXDW1, RF366BXDN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION
<u>SPLICING WIRES--25FT. LENGTH</u>		
	242820	Wire, Black 14 Ga. 150°c
	242821	Wire, Blue 14 Ga. 150°c
	242822	Wire, Brown 14 Ga. 150°c
	242830	Wire, Brown 14 Ga. 200°c
	242823	Wire, Green 14 Ga. 150°c
	242824	Wire, Orange 14 Ga. 150°c
	242829	Wire, Red 12 Ga. 150°c
	242825	Wire, Red 14 Ga. 150°c
	242831	Wire, Red 14 Ga. 200°c
	242826	Wire, White 14 Ga. 150°c
	242827	Wire, Yellow 14 Ga. 150°c
	242832	Wire, Yellow 14 Ga. 200°c
<u>LITERATURE PARTS</u>		
	LIT3187321	Installation Instructions
	LIT3150400	Intallation Instr (Templet)
	LIT3169513	Wiring Diagram
	LIT3189071	Guide, Use & Care

Illus. No.	Part No.	DESCRIPTION
<u>PAINT, TOUCH-UP (1/2oz.)</u>		
	72017	White
	72107	Almond
	72109	New Avocado
	72108	Coffee
	72110	Harvest Gold
	72112	Toast
	72113	Platinum
	**511873	White Porcelain (2 Oz.)
<u>PAINT, PRESSURIZED SPRAY (13 oz.)</u>		
	350930	White
	350956	Almond
	261888	New Avocado
	261886	Coffee
	261890	Harvest Gold
	285365	Toast
	285366	Platinum
	285006	Superior Black
	206922	Primer (White)
	206925	Leveler (Thinner) (2 oz.)
<u>PAINT, BULK (1 qt.)</u>		
	799344	White (Uncut)
	978883	Almond (Uncut)
	261887	Coffee (Uncut)
	261891	Harvest Gold (Uncut)
	285367	Toast (Uncut)
	285368	Platinum (Uncut)

**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

Illus. No.	Part No.	DESCRIPTION
<u>REFINISHING MATERIAL</u>		
	799832	Kit, Porcelain Repair (White)
	242756	Touch-Up Self-Clean (1/2 Pt.)
	261582	Grease
<u>INSULATION</u>		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")
<u>ANTI-TIP KIT</u>		
	814234	Anti-Tip Kit (Wall Mount)
<u>ACCESSORY PARTS</u>		
	241430	Foil, Aluminum Oven (18" x 25')
	814009	Glass Cleaner

Following May Be Purchased

DO-IT-YOURSELF REPAIR MANUALS

LIT677973 Manual, Range